


Installation Guide


1

Drill a hole to the required diameter and depth for rebar size being used.

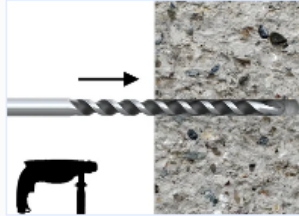


2

Blow out the dust at least 4 times with the hand pump.

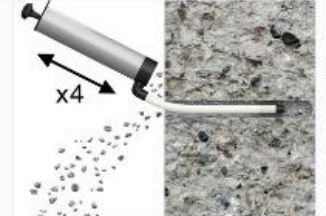

3

Can be unscrewed and screwed back in.

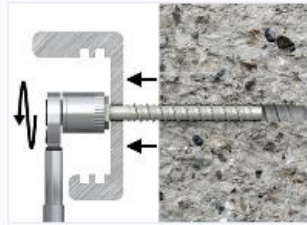

4

Tighten to the recommended torque.



5

The anchor is installed correctly

