


Installation Guide

1

Hammer the connector in until it is flush with the base material.

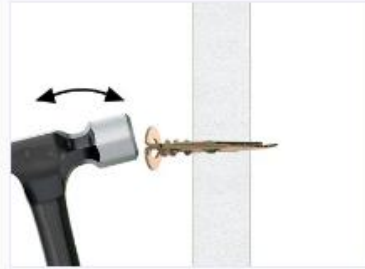

2

Place the fastener in position. Insert the screw and tighten until snug.



3

The connector is mounted correctly.

