


# Installation Guide


1

Drill a hole to the required diameter and depth for rebar size being used.

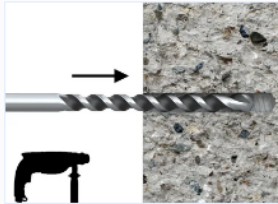

2

Blow out the dust at least 4 times with the hand pump.

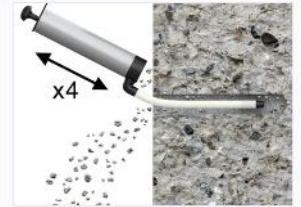

3

Lightly tap the throughbolt through the fixture into hole with a hammer, until fixing depth is reached.



4

Tighten to the recommended torque.



5

The anchor is properly fixed in the concrete base.

