

Installation Guide


1

Drill a hole to the required diameter and depth for rebar size being used.



2

Insert the screw into the drilled hole in the wooden substrate.

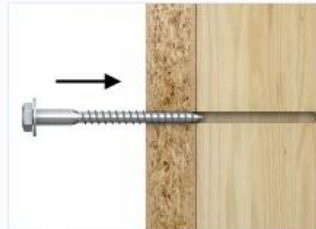

3

Tighten the screw with a torque wrench until the head is flush with the ground.



4

Correctly fixed screw in the wooden substrate.

